

Industrial PC

Android 4 OS on iMX6Q User Manual

For iMX6Q Products

Content can change at anytime, check our website for latest information of this product.

www.chipsee.com

Contents

Android 4 OS	4
1. Preparation	6
1.1. Hardware Requirements	6
1.2. Software Requirements	6
2. Getting Started and Tests	7
2.1. Boot Switch Configuration	7
2.2. Prepare Manufacturing Tool and Image	7
2.3. Downloading Images by using MFGTool	8
2.3.1. Configuring MFGTool	8
2.3.2. Copy Image To Android Directory	9
2.3.3. Using MFGTool	10
2.4. Booting Android OS And Test(Using 7inch as example)	14
2.4.1. SD Test	15
2.4.2. USB Flash Disk Test	16
2.4.3. SATA Test	17
2.4.4. Network Test	19
2.4.5. Sound Card Test	20
2.4.6. Video Test	21
2.4.7. HDMI Test	21
2.4.8. WIFI Test	22
2.4.9. ADB Test	23
2.4.10. Touch Screen Test	29
2.4.11. Serial Test	30
2.4.12. GPIO	33
3. Android 4 system debug in Windows	34
3.1. View Android 4 system via the serial port	34
3.2. Adb connect via USB OTG	36
3.2.1. Use ADB command to install user APP	37
3.2.2. Use ADB command to uninstall user APP	38
3.2.3. Use ADB command to uninstall default APP	39

3.2.4. Use ADB command to uninstall default APP	40
3.3. Adb connect via internet	41
4. Android App Development	43
4.1. Preparation	43
4.2. Example — Develop a HelloWorld Program	47
5. Disclaimer	51
6. Technical Support	51

Android 4 OS

Android 4 OS User Manual



This manual is used to provide users with a fast guide of Chipsee Industrial Computers (Abbreviated as IPC) about Android 4 OS development. Through this manual, users can quickly understand the hardware resources; users can build a complete compilation of Android development environment; users can debug Android 4 OS via serial, USB OTG and Internet.

Revision	Date	Author	Description
V1.0	2021-12-30	Randy	Initial Version

SUPPORTED BOARDS:

CS10600F070 CS12800F101 CS14900F190 CS19108F215

PREBUILT FILES PACKAGE:

Prebuilt files for the various industrial PCs can be found in the OS Downloads. Below are the links to the prebuilt files for each industrial PC model.

- CS10600F070
- CS12800F101
- CS14900F190
- CS19108F215

System Features

Feature	Comment
System	Android 4

Preparation

You will need to prepare the following items before you can start using the Prebuilt Files Package to re-flash the system.

Power Supply Unit (PSU) with the appropriate voltages, as follows:

- These products: CS14900F190 and CS19108F215 requires a 15V to 36V power adapter.
- The CS10600F070 product needs a 6V to 36V power adapter.
- The CS12800F101 product needs a 12V to 36V power adapter.

Hardware Requirements

- Chipsee Industrial PC
- PSU according to the instructions above
- USB-to-serial or other serial cable for debugging
- USB A-A cable (used only if the hardware configured as OTG)
- Windows 7 PC

Software Requirements

- Android 4 OS Prebuilt Files Package (from the link above)
- ADT for Windows
- Android USB driver (for Windows)
- MFGTools

Getting Started and Tests



Throughout this section, the user can use both the pre-built Android 4 image files and the MFGTools software to burn files to the system, boot system and perform necessary software and hardware test.

Boot Switch Configuration

CS-IMX6 has a boot configuration select switch, as shown on the figure below. You can use the boot select switch to change between two modes, namely

- eMMC Boot
- Download



Figure 129: Boot Mode Setup

SW Mode	1	2	3	4
еММС	1	1	0	1
Download	0	1	1	0

Table 41 Boot Configuration Selection

Prepare Manufacturing Tool and Image

The manufacturing tool, referred to as **MFGTool**, is a tool that runs on a Windows PC. You can use it to download pre-built images to the eMMC on a Chipsee board. The tools directory contains the tar.gz file.

MFGTool	Windows download tool
Kernel Image	Boot.img
U-boot Image	u-boot.bin
Recovery Image	Recovery.img
Android File System	System.img

MFGTool	Windows download tool
Industrial Computer	One
USB OTG Cable	One
12V-2A power adapter	One

Downloading Images by using MFGTool

Chipsee IPC supports booting from an integrated eMMC.

Configuring MFGTool

To configure MFGTools, follow these steps:

- Unzip Mfgtools-Rel-xxx xxxxxx MX6Q UPDATER Vxx.tar.gz file.
- Open the extracted folder Mfgtools-Rel-xxx_xxxxxx_MX6Q_UPDATER_Vxx and edit cfg.ini file.

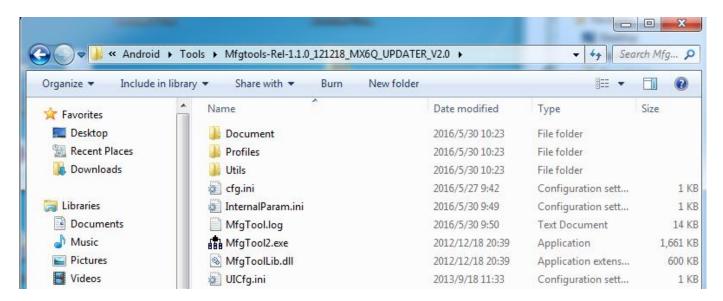


Figure 130: Extracted folder content

• In the cfg.ini file, ensure the name variable is set to Android-SabreSD-eMMC, as shown on the figure below.

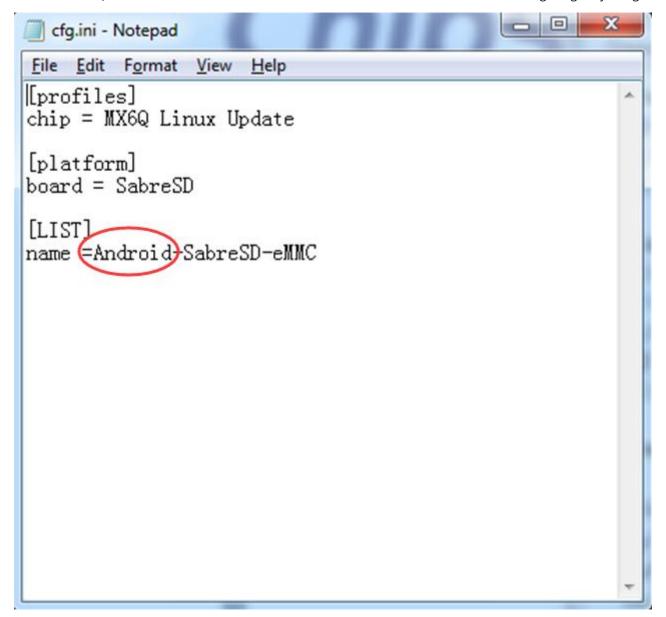


Figure 131: Cfg.ini file

Copy Image To Android Directory

Follow these steps to copy image to Android directory:

- Unzip prebuilt-csXXXXXfXXX-vX-android-YYYYMMDD.rar file. The extracted folder will contain these files: boot.img, recovery.img, system.img, and u-boot.bin.
- Copy the files in the extracted folder to *Mfgtools-Rel-XXX_XXXXX_MX6Q_UPDATER_VXX\Profiles\MX6Q_Linux_Update\OS Firmware\files\android* directory.

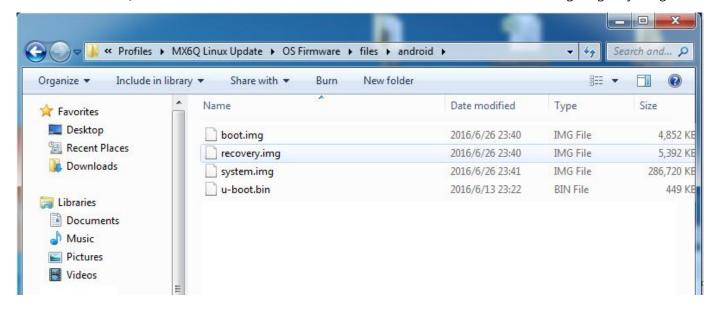


Figure 132: Extracted folder with files

Using MFGTool

- 1. Connect a USB OTG cable from a Windows PC to the USB OTG port on the IPC.
- 2. Change the boot select configuration to 0 1 1 0, as shown on the figure below.

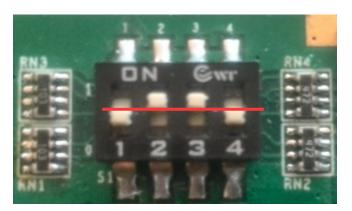


Figure 133: Boot Switch Config

- 3. Connect a 12V-2A power adapter to the IPC and power ON.
- 4. On your Windows PC, open the Mfgtools-Rel-XXX_XXXXXX_MX6Q_UPDATER_VXX directory and run the MfgTool2.exe file, as shown on the figure below.

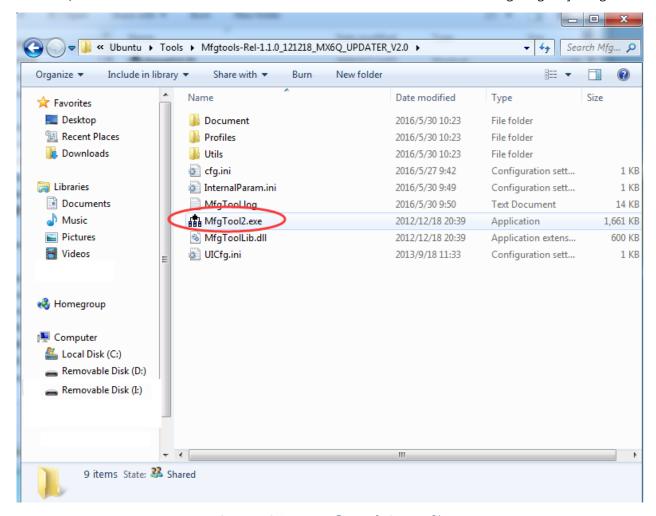


Figure 134: Run MfgTools2.exe file



Figure 135: Prepare to start

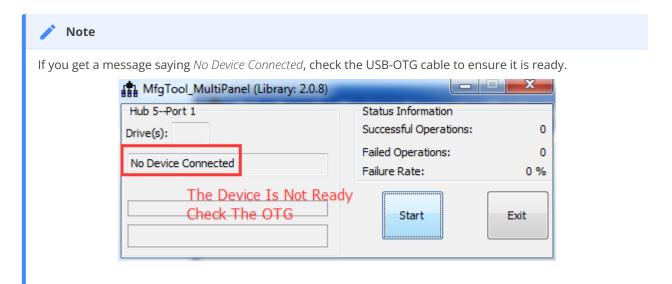


Figure 136: The USB-OTG cable is not connected correctly.

5. Click on Start button to download the Image.


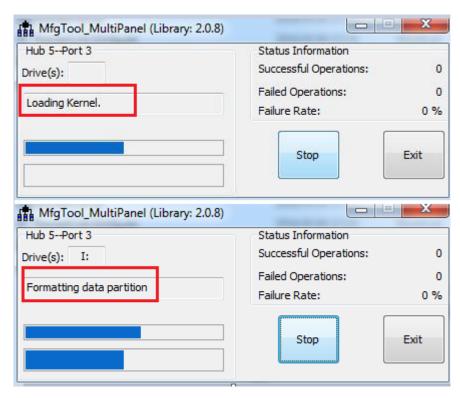


Figure 137: Loading Kernel and Formatting rootfs partition

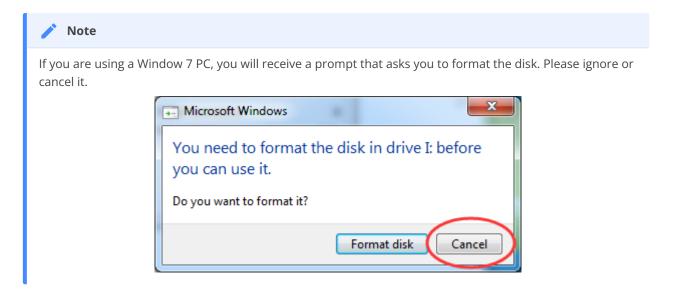

6. When the process is complete, you click the Stop button to stop downloading Image and exit.

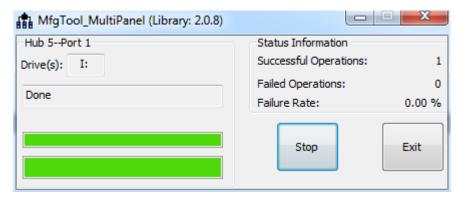


Figure 138: Download Image is finished

Booting Android OS And Test(Using 7inch as example)

The first time you start Android 4 OS on the industrial PC will take a little time. But after the first time, Android 4 OS will start quickly. It is a successful start if you see the Android 4 OS desktop such as the one shown in the figure below:



Figure 139: Android Desktop Screen

|root@sabresd_6dq:/ #

SD Test

The IPC supports SD card hot-plug. The figure below shows the message when you plug the SD card into IPC, but the IPC will not mount the SD Card.

```
root@sabresd_6dq:/ #
root@sabresd_6dq:/ # mmc1: new high speed SDHC card at address 59b4
mmcblk1: mmc1:59b4 SS08G 7.40 GiB
   mmcblk1: p1 p2
```

Figure 140: Serial Message

You can mount the plugged SD card by using the following command.

```
# mount -t vfat /dev/block/mmcblk1p1 /mnt/extsd/

root@sabresd_6dq:/ # mount -t vfat /dev/block/mmcblk1p1 /mnt/extsd/
root@sabresd_6dq:/ # ls /mnt/extsd/
MLO
boot.scr
u-boot.img
uImage
ubi.img
```

USB Flash Disk Test

The USB Flash Disk is like the SD Card, except for the mount point. The IPC mounts the USB Flash Disk to /mnt/udisk .

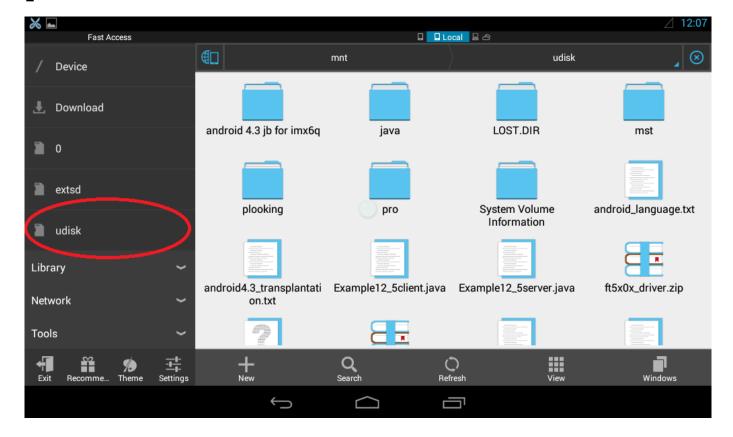



Figure 141: USB flash disk test

SATA Test

The SATA does not support hot-plug, but the Android 4 OS supports NTFS. You can use the NTFS-3g tool to mount SATA disk partitions by running this command:

```
# ntfs-3g /dev/block/sda1 /mnt/shm/
```

```
root@sabresd_6dq:/ # ntfs-3g /dev/block/sda1 /mnt/shm
root@sabresd_6dq:/ # ls /mnt/shm/
360SANDBOX
360楂橀€熶変杞 AUTOEXEC.BAT
CONFIG.SYS
Documents and Settings
IO.SYS
InstallC112
Intel
MSDOS.SYS
MS0Cache
MaxReport
NTDETECT. COM
Program Files
RECYCLER
System Volume Information
WINDOWS
bar.emf
boot.ini
bootfont.bin
dell
iNodeLog
nt1dr
pagefile.sys
testbookmarks.html
root@sabresd_6dq:/#
```

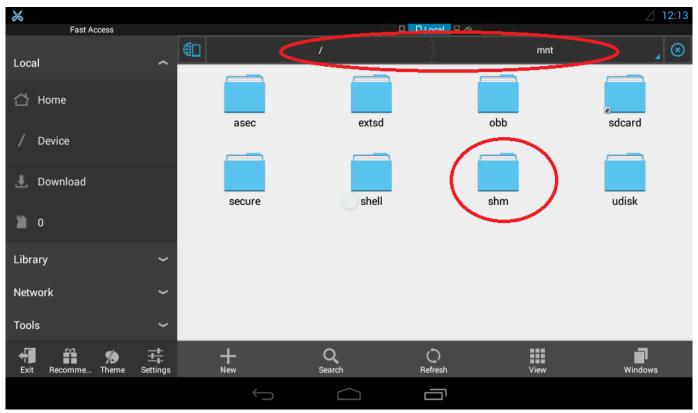

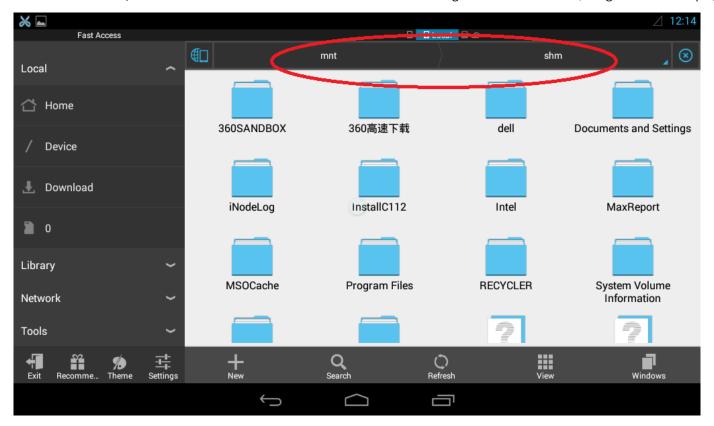



Figure 142: SATA test

Network Test

The network uses DHCP to get IP Addresses. You can get network access if you connect a LAN cable from the IPC to a router.


You can change the IP Address with this command.

netcfg eth0 dhcp

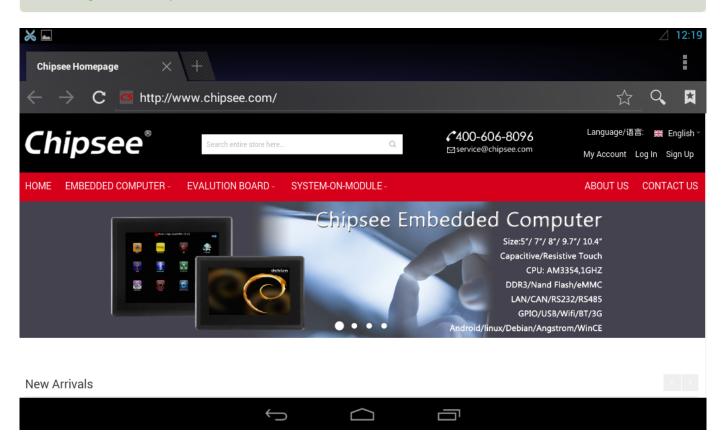


Sound Card Test

Please open an audio file to test the Sound Card.

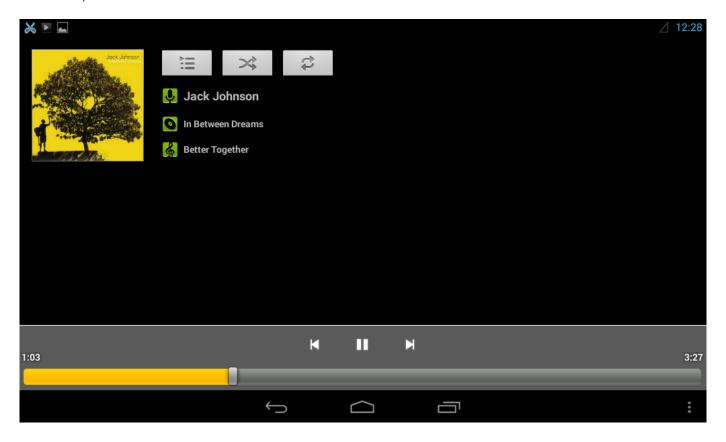

Video Test

Please open a video file to test the Video.

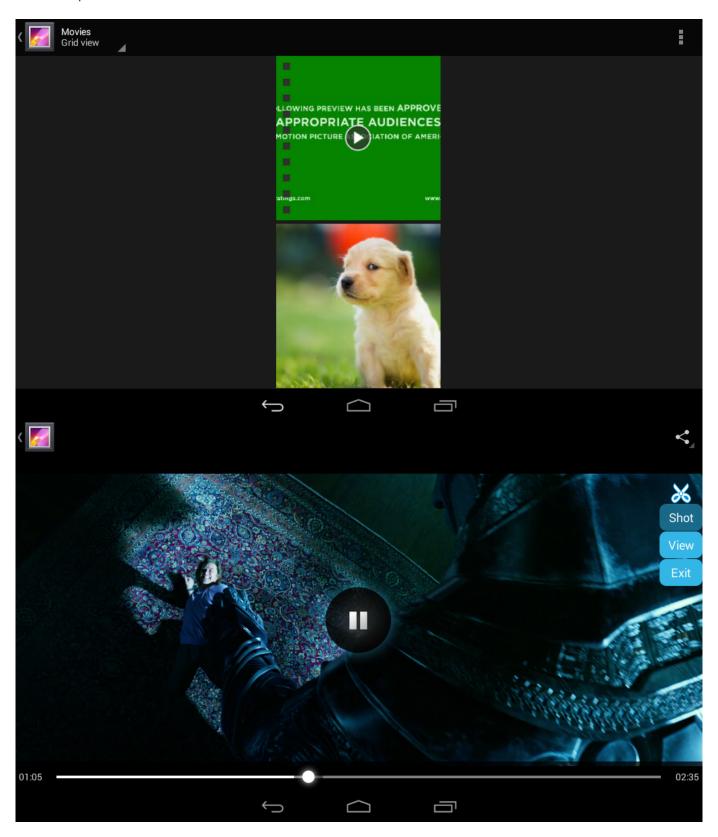

HDMI Test

You can reference this document, **IMX6Q U-boot Setting HDMI Output For Android.pdf**, to learn about performing HDMI tests.



HDMI does not support hot-plug. The sound comes from the HDMI monitor, neither the speaker nor the headset on board.


WIFI Test

You must ensure the IPC has an SDIO Wi-Fi module integrated before performing the Wi-Fi test. If the IPC has an SDIO Wi-Fi Module, you can connect to the Wi-Fi and open a browser to test.

ADB Test

You must enable USB debugging on IPC before performing ADB test. | br | Follow these steps to enable USB debugging.

· Goto the Settings and tap on About tablet tab, as shown on the figure below.

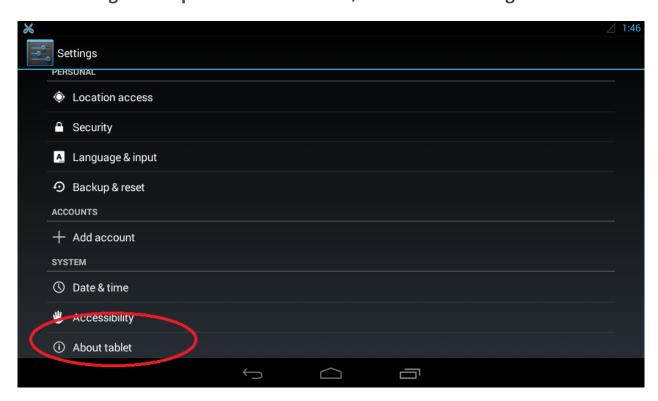

• Tap on the Build number repeatedly until you enable Developer Options, as shown on the figure below.

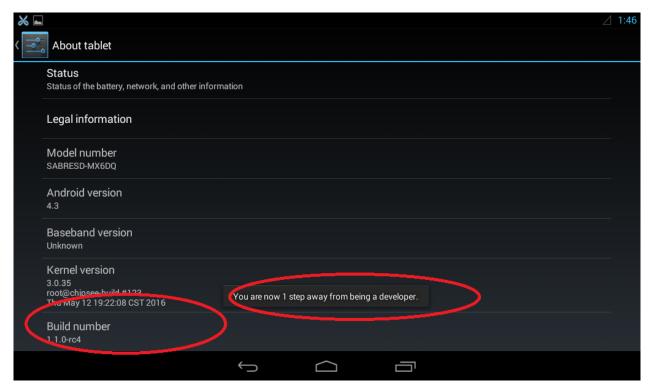


Figure 143: Enable Developer Options

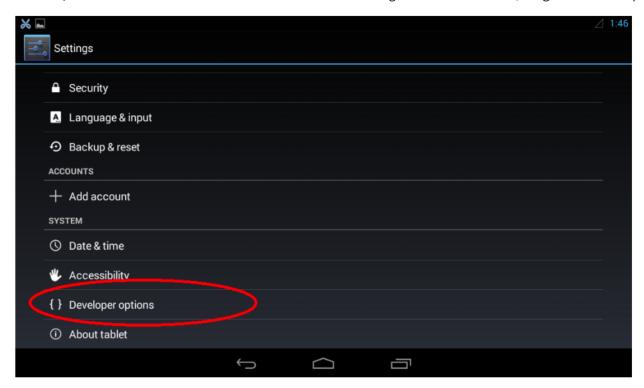


Figure 144: Developer Options

• Move back to Settings and tap on Developer Options. You can enable *USB* debugging by ticking the checkbox next to it.

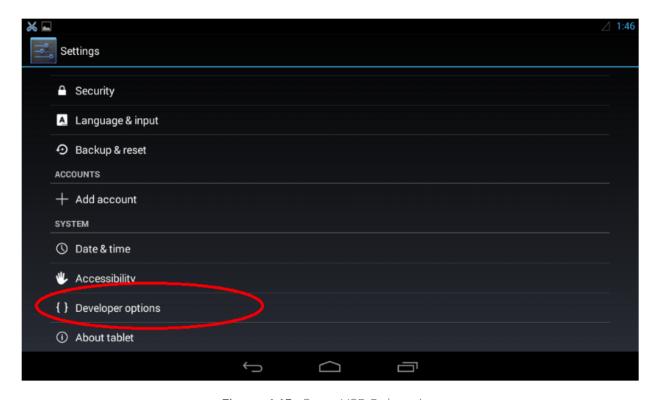


Figure 145: Open USB Debugging

Also, you can use the ADB tool in the tools directory to test the ADB.

• Unzip it to the root directory of your Windows PC (Drive C), as shown on the figure below.

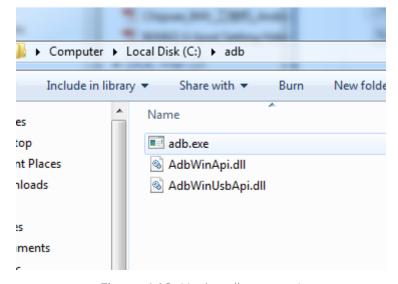


Figure 146: Unzip adb.rar to c:\

• You need to add path of the ADB directory to system's environment variable. Follow the steps described in the figures below to set the environment variable.

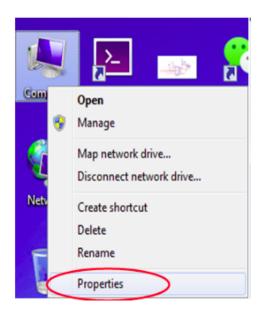
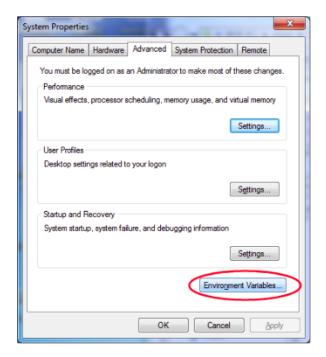




Figure 147: Open Advance system settings



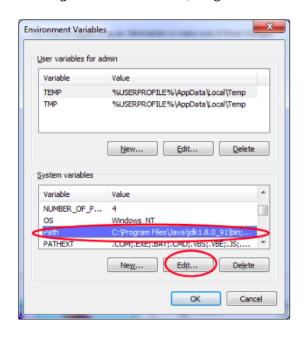


Figure 148: Open and edit the **Path* system variable*

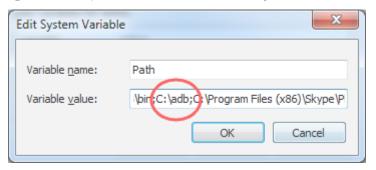


Figure 149: Add path of the ADB directory to the Path system variable

• Open the command-prompt on Windows and enter this command adb version, as shown on the figure below. The process is successful, if the command-prompt displays the version number of ADB.

```
C:\Users\admin>adb version
Android Debug Bridge version 1.0.31
C:\Users\admin>_
```

Figure 150: ADB tool is working

• Connect the USB-OTG cable from the Windows PC to IPC. You will get a message Allow USB debugging?. Please select Always allow from this computer and click Ok.

C:\Users\admin>

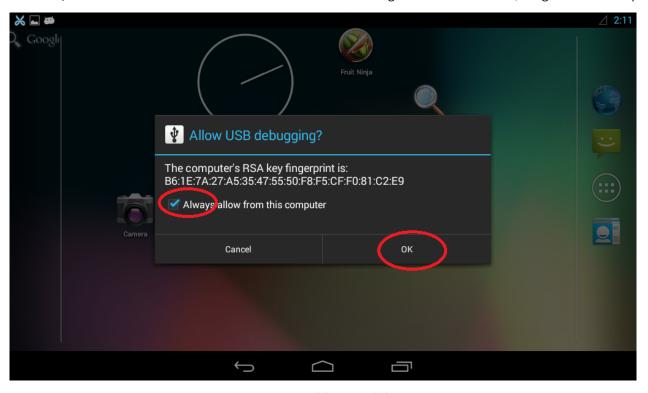


Figure 151: Enable USB debugging

You can list the devices attached to the Windows PC with this command.

```
$ adb devices

C:\Users\admin\adb devices
List of devices attached
0123456789ABCDEF device
```

Figure 152: Checking devices attached

You can install an android app from the Windows PC onto the IPC with this command.



Figure 153: Install android app

Touch Screen Test

Run MultiTouch Tester App.

The screen will show the number and position of the touch point when touching the screen.



- Resistive screen expansion board only supports single-touch, and capacitive screen expansion board supports five-point touch as described in the figure below.
- The 21.5", 19", and 17" capacitive screen supports a ten-point touch.

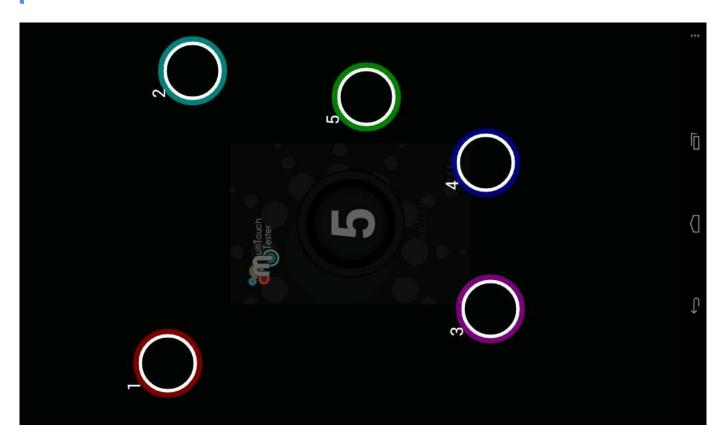


Figure 154: Touch screen test (Capacitive touch)

Serial Test

There are five serial ports on the Chipsee IPC: 2 x RS232 and 3 x RS485 (can be customised). Refer to the table below for the available serial device nodes.

Ports	Device Node
COM1(RS232, Debug)	/dev/ttymxc0
COM2(RS485)	/dev/ttymxc1
COM3(RS232)	/dev/ttymxc2
COM4(RS485)	/dev/ttymxc3
COM5(RS485)	/dev/ttymxc4


Table 42 Serial Ports Nodes on the System



If you use COM2(RS485), you can't use Bluetooth because COM2(RS485) share pin with Bluetooth.

You can install the **SecureCRT** or **Putty** software on a Windows 7 PC to test the serial ports by following these steps:

- Connect COM1 on industrial PC board to Windows 7 PC.
- Run Serial Port API App to communicate with Windows 7 PC, as shown on the figure below.

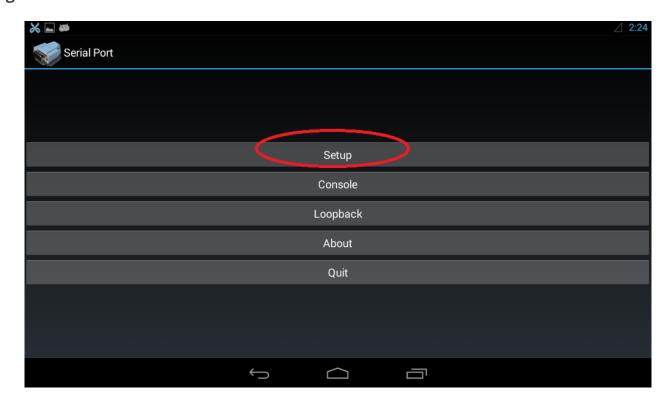

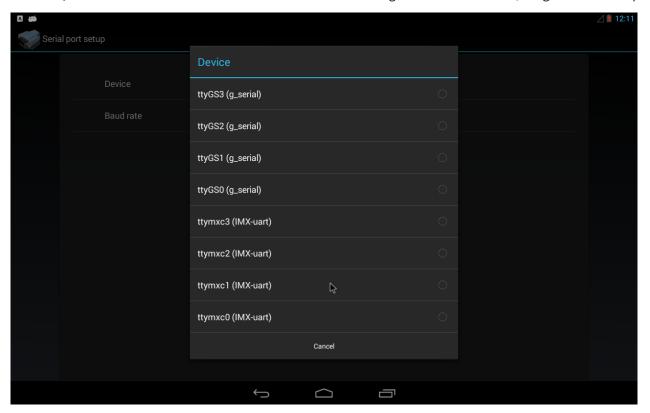


Figure 155: Serial settings

• Push the button with the label "Send 01010101", you will see something on the Windows 7 PC that looks similar to the figure below.

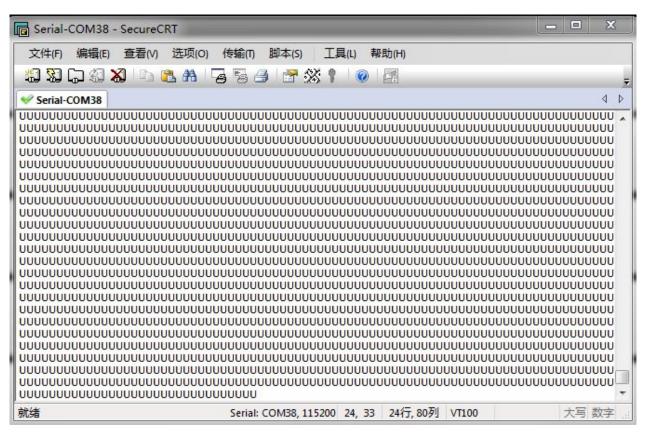


Figure 156: Serial send test

• Push the button with the label "Console", to send whatever you like as shown on the figure below.



Figure 157: Serial receive test

GPIO

For the **CS12800F101** IPC, there are 8 GPIO ports that you can set as output or input with LOW as 0V; the HIGH as 3.3V.

Please check the **GPIO Connector** section in CS12800F101 to know the position of the GPIO Connector. Refer to the table below for the available GPIO nodes on system.

PIN Number	GPIO Number
3	gpio106
4	gpio30
6	gpio95
7	gpio87
8	gpio29
9	gpio28
11	gpio94
12	gpio130

Table 43 GPIO Nodes on the System

Example: We are going to set **gpio106** as output, and let it output HIGH or output LOW.

Example: We are going to set **gpio30** as input.

Example: We are going to set **gpio30** as unexport.

```
# echo 30 > /sys/class/gpio/unexport //unexport gpio30
```

Android 4 system debug in Windows

In this section, we will discover how to view the Android 4 system via the serial port and debug the system via USB OTG.

Also, we will discover how to install and uninstall applications via USB OTG.

The following operation is under the Windows 7 x64 environment, similar to other Windows platforms.

View Android 4 system via the serial port

Install the **SecureCRT** or **Putty** software on a Windows 7 PC to view the Android 4 system via the serial ports.

Follow these steps to view Android 4 system via the serial port:

- Connect COM1 on the industrial PC board to Windows 7 PC.
- Open the SecureCRT or Putty software on the Windows 7 PC and configure it as shown on the figure below.

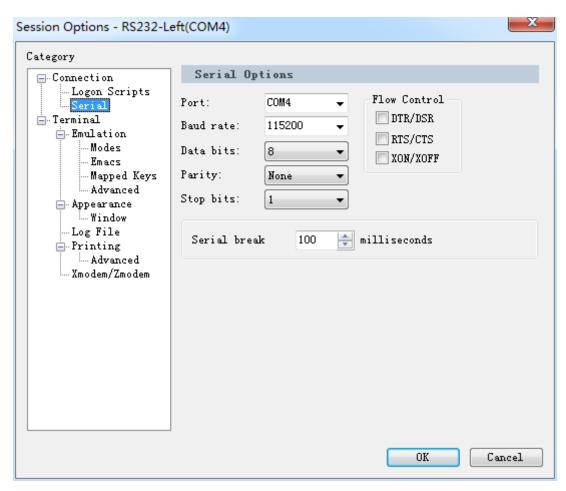


Figure 158: SecureCRT configuration

 Power ON the industrial PC. You will see the serial output information as shown on the figure below.

```
Hit any key to stop autoboot: mmc3(part 0) is current device
      MMC read: dev # 3, block # 2048, count 12288 ... 12288 blocks read: OK
## Booting kernel from Legacy Image at 10800000 ...
Image Name: Linux-3.0.35-2508-g54750ff
Image Type: ARM Linux Kernel Image (uncompressed)
                                 Image Name: Linux-3.0.35-2
Image Type: ARM Linux Kern
Data Size: 4805952 Bytes
Load Address: 10008000
Entry Point: 10008000
Verifying Checksum ... OK
Loading Kernel Image ... OK
                                                                                                                                                                  4805952 \text{ Bytes} = 4.6 \text{ MB}
Uncompressing Linux... done, booting the kernel.
Linux version 3.0.35-2508-g54750ff (root@chipsee-build) (gcc version 4.6.2 20110630 (prerelease) (Freesc CPU: ARMV7 Processor [412Fc09a] revision 10 (ARMV7), cr=10c53c7d
CPU: VIPT nonaliasing data cache, VIPT aliasing instruction cache
Machine: Freescale i.Mx 6Quad/DualLite/solo Sabre-SD Board
Ignoring unrecognised tag 0x54410008
Memory policy: Ecc disabled, Data cache writealloc
CPU identified as i.Mx6Q, unknown revision
PERCPU: Embedded 7 pages/cpu @8c80e000 s5440 r8192 d15040 u32768
Built 1 zonelists in zone order, mobility grouping on. Total pages: 462848
Kernel command line: console=ttySxC0,115200 video=mxcfb0:dev=ldb,LDB-wXGA,if=RGB24,bpp=32 ldb=sin0 video
kernel time=10:10:07,date=Jun 23 2016
PID hash table entries: 4096 (order: 2, 16384 bytes)
Dentry cache hash table entries: 131072 (order: 8, 1048576 bytes)
Inode-cache hash table entries: 131072 (order: 7, 524288 bytes)
Memory: 1856MB = 1856MB = 1824MB total
Memory: 1856MS = 556MB = 1824MB total
Memory: 1856MS = 1856MB = 600000 (  4 kB)
fixmap : 0xfff00000 - 0xffff10000 (  4 kB)
fixmap : 0xff00000 - 0xffff00000 (  896 kB)
DMA : 0xf4600000 - 0xf6000000 (  184 MB)
vmalloc: 0xea800000 - 0xea000000 (  120 MB)
lowmem : 0x80000000 - 0x80000000 (  120 MB)
modules: 0x7f000000 - 0x80000000 (  2 MB)
modules: 0x7f000000 - 0x80000000 (  2 MB)
modules: 0x7f000000 - 0x80000000 (  2 MB)
init : 0x800030000 - 0x800300000 (  212 kB)
.text : 0x8003d000 - 0x8003d000 (  212 kB)
.text : 0x8003d000 - 0x80044bf0 (  2319 kB)
.data : 0x80c46000 - 0x80ccbed (  539 kB)
.bss : 0x80cccc04 - 0x80d252ec (  539 kB)
.bss : 0x80ccc04 - 0x80d252ec (  539 kB)
.data : 0x80ccc04 - 0x80d252ec (  539 kB)
       Starting kernel ...
```

Figure 159: Serial output information

You can communicate with the system when system boot is complete.

Adb connect via USB OTG

Please refer to the ADB Test chapter to learn how to set the ADB, how to install an app via ADB, and how to debug with ADB.

You can use the following command to log in to the board and communicate with it.

> adb shell

```
C:\Users\Chipsee>adb shell
shell@sabresd_6dg:/ $ su
su
root@sabresd_6dq:/ # ls
1s
acct
cache
charger
config
data
default.prop
deu
device
etc
file_contexts
fstab.freescale
init
init.chipsee.sh
init.environ.rc
init.freescale.i.MX6DL.rc
init.freescale.i.MX6Q.rc
init.freescale.i.MX6QP.rc
init.freescale.rc
init.freescale.usb.rc
init.rc
init.recovery.imx6.rc
init.trace.rc
init.usb.configfs.rc
init.usb.rc
init.zygote32.rc
```

Figure 160: ADB Shell

Use ADB command to install user APP

Use the adb command to install an Android App: for example SogouInput.apk. If there is a **SUCCESS** message, as shown on the figure below, then the app installation was successful.

```
> adb install SogouInput.apk

G: \text{\text{Windows\system32\cmd.exe}}

G: \text{\text{\text{Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb install Sog ouInput.apk}}

2972 \text{\text{\text{\text{B}/s} (11137726 bytes in 3.659s)}}

\text{\text{\text{pkg: /data/local/tmp/SogouInput.apk}}}

G: \text{\text{\text{Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\a}}
```

Figure 161: Install App

Use ADB command to uninstall user APP

Use adb command to uninstall an Android app: for example AngryBirds.apk. Follow these commands to uninstall an app.

```
> adb shell pm list packages
> adb uninstall com.rovio.angrybirds
```

• The pm list command gets the full name of the app, as shown on the figure below.

```
C:\Users\admin\adb shell pm list packages

package:com.freescale.wfdsink

package:com.android.soundrecorder

package:com.android.launcher

package:com.android.defcontainer

package:com.rovio.angrybirds

package:com.android.quicksearchbox

package:com.the511plus.MultiTouchTester

package:com.android.contacts

package:com.android.inputmethod.latin

package:com.android.phone
```

Figure 162: Uninstall user app

- The uninstall command uninstalls the app from the Android system.
- Delete the apk file for the app by using these commands:

```
> adb shell
# cd /system/app/
# ls
# rm Browser.apk
```

Use ADB command to uninstall default APP

Use adb command to uninstall an Android app: for example *Email.apk*. Follow these commands to uninstall a default app.

```
> adb shell

$ su
su

# cd /system/app
cd /system/app
# rm Email.apk
```

```
C:\Users\admin>adb shell
shell@sabresd_6dq:/ $ su
su
root@sabresd_6dq:/ # cd /system/app
cd /system/app
root@sabresd_6dq:/system/app # rm Email.apk_
```

Figure 163: Uninstall default app

Use ADB command to uninstall default APP

Use adb command to transport files between the industrial PC and Windows 7 PC.

• Transfer file from the industrial PC to Windows 7 PC using adb pull command.

```
> adb pull <pathTo_file_on_board> <pathTo_store_file_on_PC>
```

• Transfer file from the Windows 7 PC to the industrial PC using adb push command.

```
> adb push <pathTo_file_on_PC> <pathTo_store_file_on_board>
```

For example, copy <ADT>\sdk\platform-tools\chipsee.txt from Windows PC to IPC:

```
> adb push chipsee.txt /chipsee.txt
```

Copy /testFile.txt from IPC to Windows PC:

```
> adb pull /testFile.txt testFile.txt
```

Adb connect via internet

1. The Ethernet port on the industrial PC and the host machine (Windows 7 PC) should connect to the network. Check Ethernet configuration for the industrial PC using the command below.

```
# netcfg
lo UP 127.0.0.1/8 0x00000049 00:00:00:00:00
can0 DOWN 0.0.0/0 0x00000080 00:00:00:00:00
eth0 UP 192.168.6.176/24 0x00001043 le:ed:19:27:1a:b3
```

2. If the industrial PC's Ethernet is not configured, configure the Ethernet using the ifconfig / netcfg command as shown below.

```
# netcfg eth0 dhcp
```

3. Configure the ADB Daemon to use an Ethernet connection using the setprop command, as shown below.

```
# setprop service.adb.tcp.port 5555
```

4. If the network is configured successfully using the steps above, then Restart service adbd on the Windows 7 PC.

```
# stop adbd
# start adbd
```

5. On the host machine (Windows 7 PC) use the following commands to establish the adb connection.

```
$ adb kill-server
$ adb start-server
$ adb connect :5555
```

6. Verify the device connectivity, by executing the following commands. If connected, find the device name listed as ``IPADDRESS:PORT``.

```
$ adb devices
List of devices attached
192.168.6.176:5555 device
```

- 7. An example of using the adb command to install software for Android. Make sure the "**".apk file is at the current folder, and export the adb path.
 - Use the argument —s to assign the device to use over the internet.

\$ adb -s 192.168.1.117:5555 install "**".apk

Android App Development

In this section, we will introduce the development of an Android app with Eclipse on Windows. We assume that the USB is OTG model and the driver is already installed. (See Adb connect via USB OTG)

Preparation

- 1. Download and install Eclipse IDE.
- 2. Go to the /eclipse folder, start eclipse.exe.

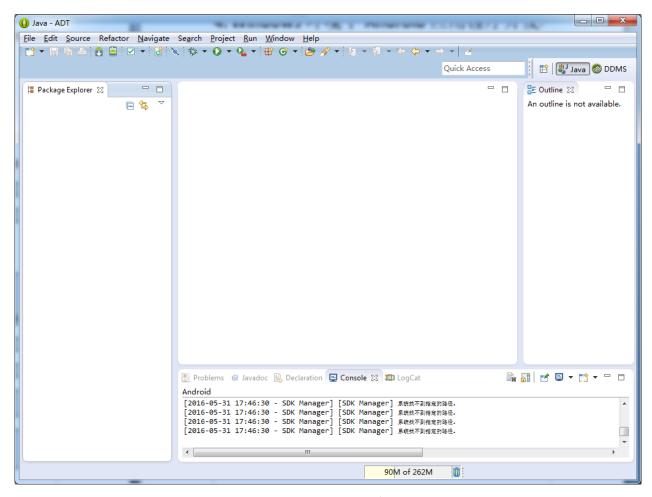


Figure 164: Start eclipse

3. Click Windows->Android SDK Manager to open SDK Manager.

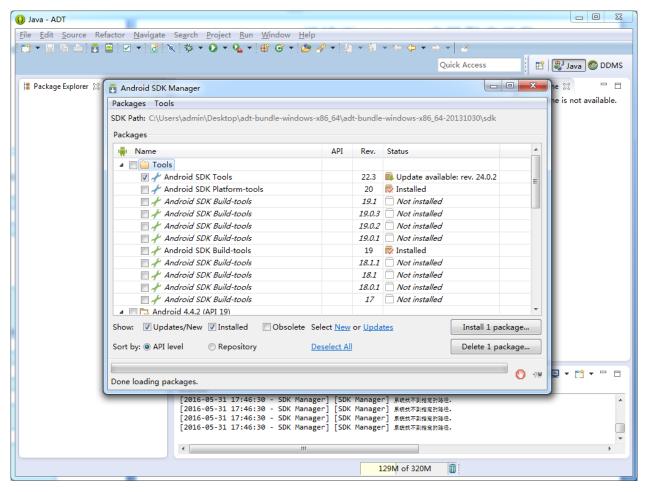


Figure 165: Android SDK Manager

4. Click Tools->Options, check the Force box and click close.

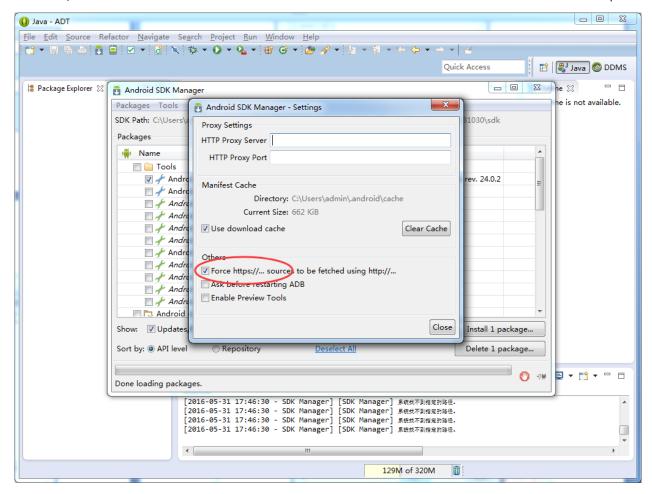


Figure 166: Android SDK Manager Settings

5. Choose the API, such as Android4.3(API 18), then click the Install packages button to start the download and installation of API packages.

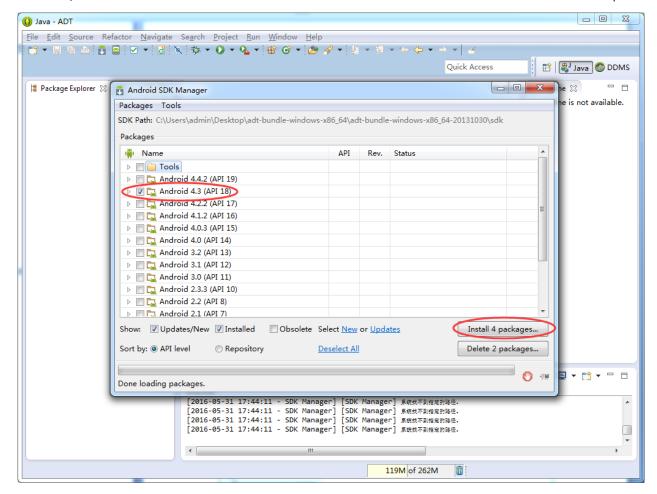


Figure 167: Install API packages

6. Downloading and installing the packages will take some time. When the process completes, close the Android SDK Manager.

Example — Develop a HelloWorld Program

1. Click File->New->Android Application Project

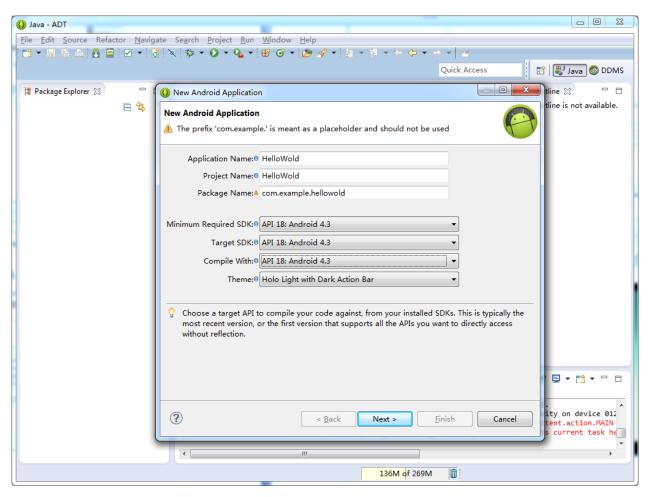


Figure 168: New Application

2. Click on the Next button until the app project is created. Connect the industrial PC to Windows 7 PC via the USB cable (A-A). If the connection is successful, you will see the device in the DDMS window (Windows->Open Perspective->Other->DDMS)

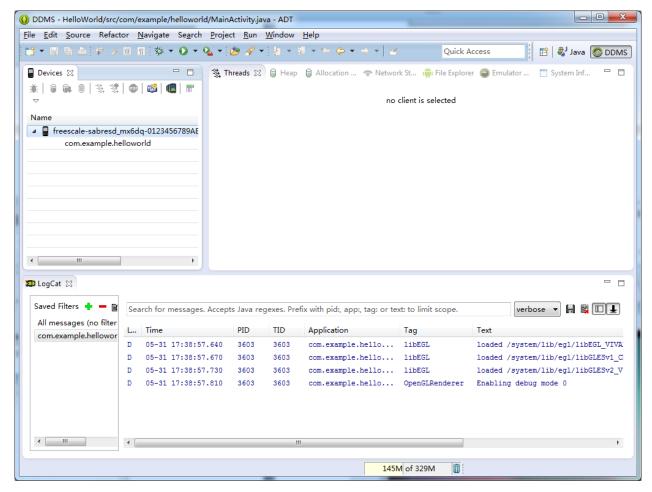


Figure 169: DDMS

3. You can capture the desktop of Android

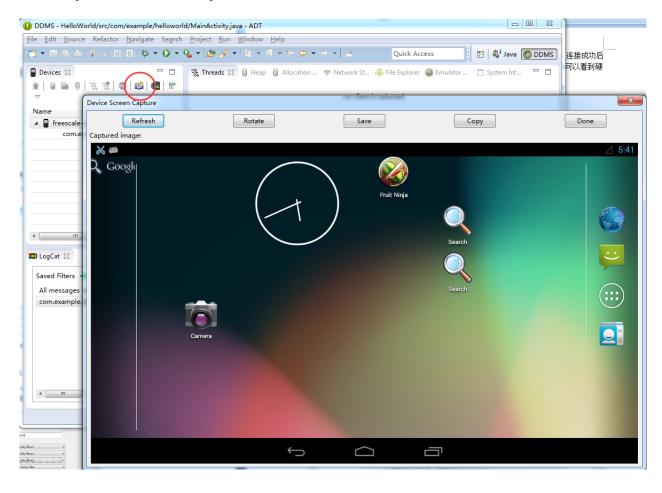


Figure 170: Capture Android Desktop

4. Click run, and choose the device

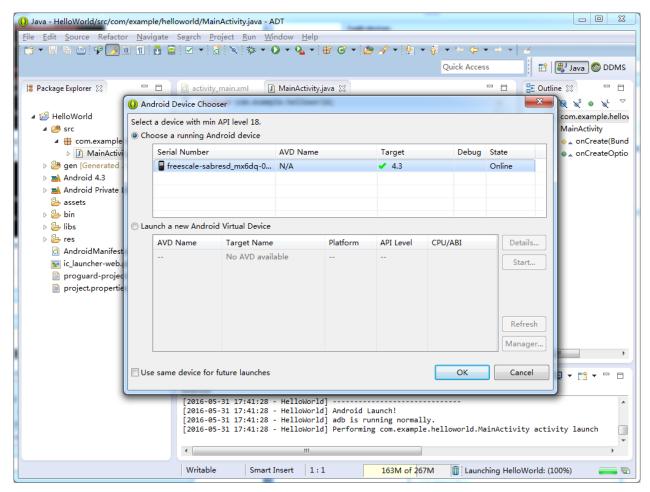


Figure 171: Run HelloWorld Program

5. Result

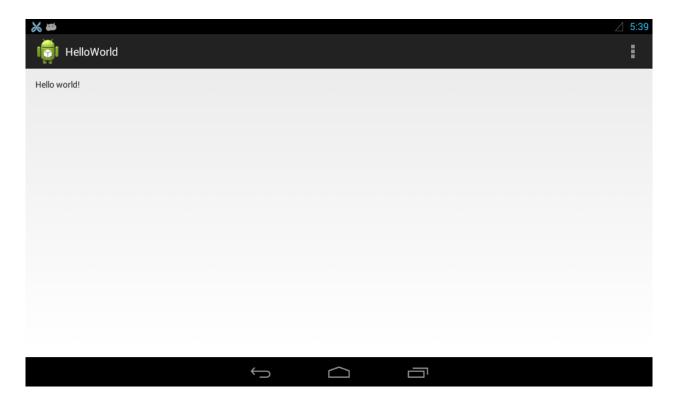


Figure 172: HelloWorld Program



If the USB is not configured as an OTG model, you can copy and install the file <code>HelloWorld.apk</code> from the project folder <code>HelloWorld/bin/</code>, or install the <code>HelloWorld.apk</code> via the internet (See Adb connect via internet).

For more resources about Android development, visit these links:

https://developer.android.com/guide/index.html https://developer.android.com/develop/index.html http://developer.android.com/support.html http://blog.apptopia.com/android-development-forums/ http://androidforums.com/application-development/

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.